


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

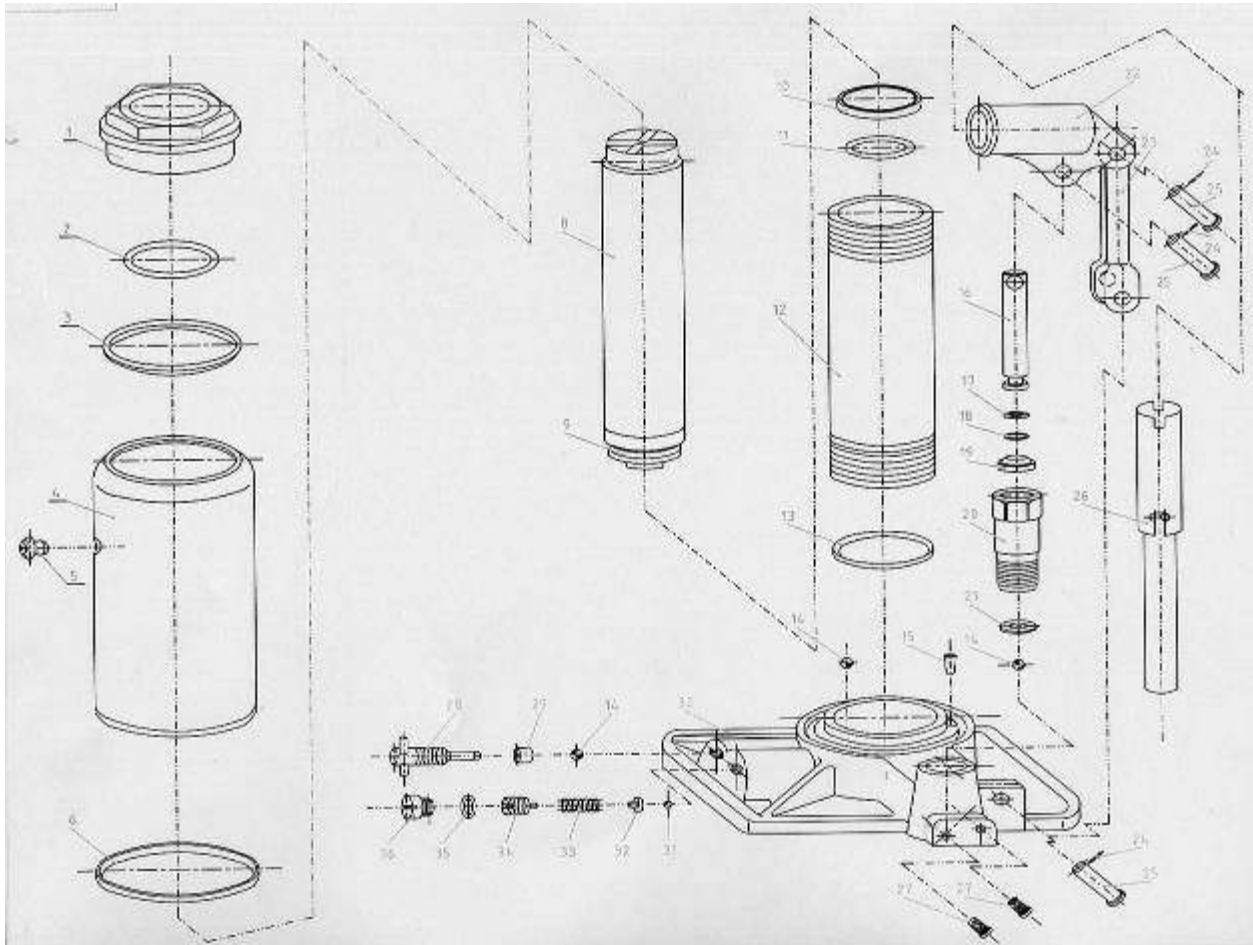

Y413000

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y413000-01	Top Nut	19	Y413000-19	Dust Wiper
2	Y413000-02	O-Ring	20	Y413000-20	Pump Cylinder
3	Y413000-03	Nylon Gasket	21	Y413000-21	Copper Gasket
4	Y413000-04	Oil Tank	22	Y413000-22	Handle Socket
5	Y413000-05	Oil Plug	23	Y413000-23	Linkage
6	Y413000-06	Square Seal	24	Y413000-24	Cotter Pin
			25	Y413000-25	Axle
8	Y413000-08	Ram	26	Y413000-26	Handle Assembly
9	Y413000-09	Piston	27	Y413000-27	Oil Stopper
10	Y413000-10	U-cup Ring	28	Y413000-28	Release Valve
11	Y413000-11	O-Ring	29	Y413000-29	Square Seal
12	Y413000-12	Cylinder	30	Y413000-30	Base
13	Y413000-13	Square Seal	31	Y413000-31	Steel Ball
14	Y413000-14	Steel Ball	32	Y413000-32	Stud
15	Y413000-15	Dust Wiper	33	Y413000-33	Compression Spring
16	Y413000-16	Pump Plunger	34	Y413000-34	Pressure Screw
17	Y413000-17	Snap Ring	35	Y413000-35	O-Ring
18	Y413000-18	O Ring	36	Y413000-36	Safety Screw
			*	Y413000-RK	Repair Kit