


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

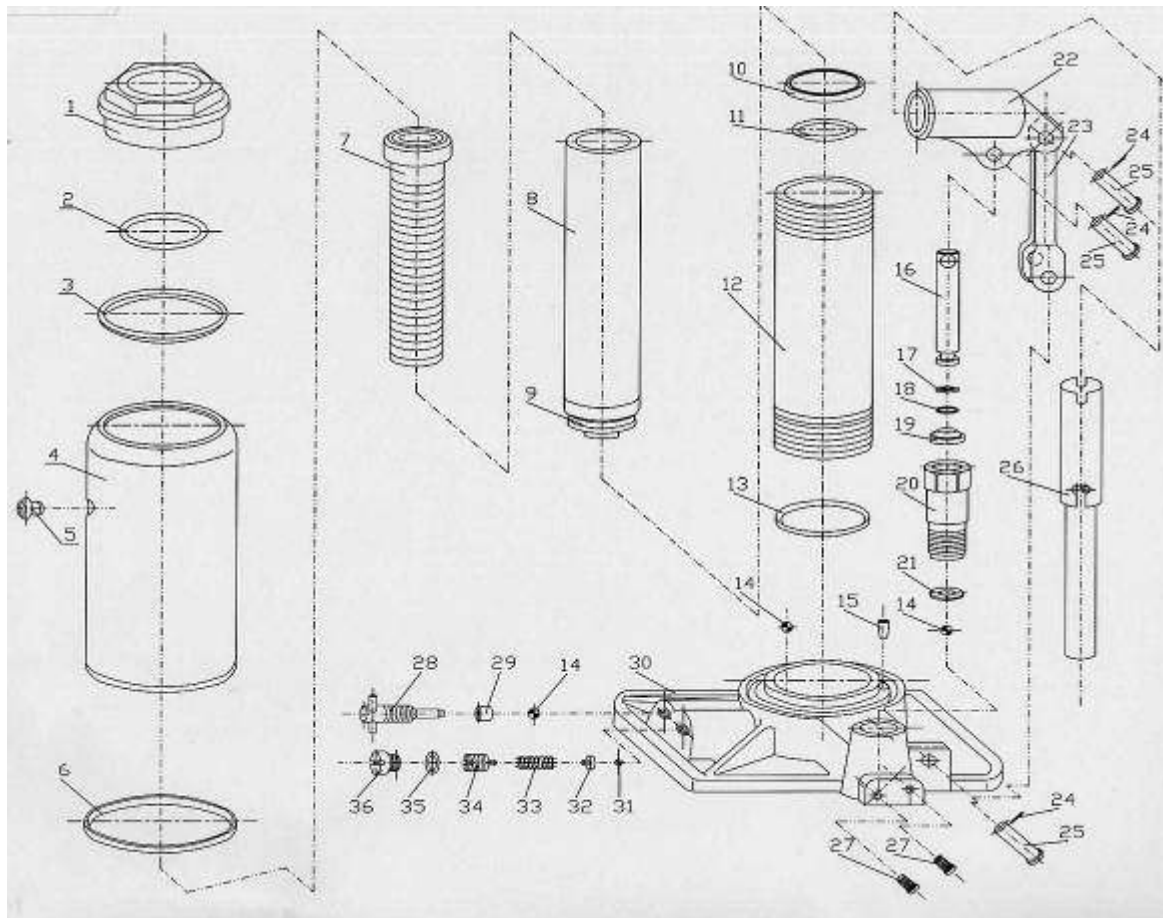

Y410200

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y410200-01	Top Nut	19	Y410200-19	Dust Wiper
2	Y410200-02	O-Ring	20	Y410200-20	Pump Cylinder
3	Y410200-03	Nylon Gasket	21	Y410200-21	Copper Gasket
4	Y410200-04	Oil Tank	22	Y410200-22	Handle Socket
5	Y410200-05	Oil Plug	23	Y410200-23	Linkage
6	Y410200-06	Square Seal	24	Y410200-24	Cotter Pin
7	Y410200-07	Extension Screw	25	Y410200-25	Axle
8	Y410200-08	Ram	26	Y410200-26	Handle Assembly
9	Y410200-09	Piston	27	Y410200-27	Oil Stopper
10	Y410200-10	U-cup Ring	28	Y410200-28	Release Valve
11	Y410200-11	O-Ring	29	Y410200-29	Square Seal
12	Y410200-12	Cylinder	30	Y410200-30	Base
13	Y410200-13	Square Seal	31	Y410200-31	Steel Ball
14	Y410200-14	Steel Ball	32	Y410200-32	Stud
15	Y410200-15	Dust Wiper	33	Y410200-33	Compression Spring
16	Y410200-16	Pump Plunger	34	Y410200-34	Pressure Screw
17	Y410200-17	Snap Ring	35	Y410200-35	O-Ring
18	Y410200-18	O Ring	36	Y410200-36	Safety Screw
			*	Y410200-RK	Repair Kit