


- Onderdelen –
- Spare parts –
- Pièces de rechange –
- Ersatzteile –

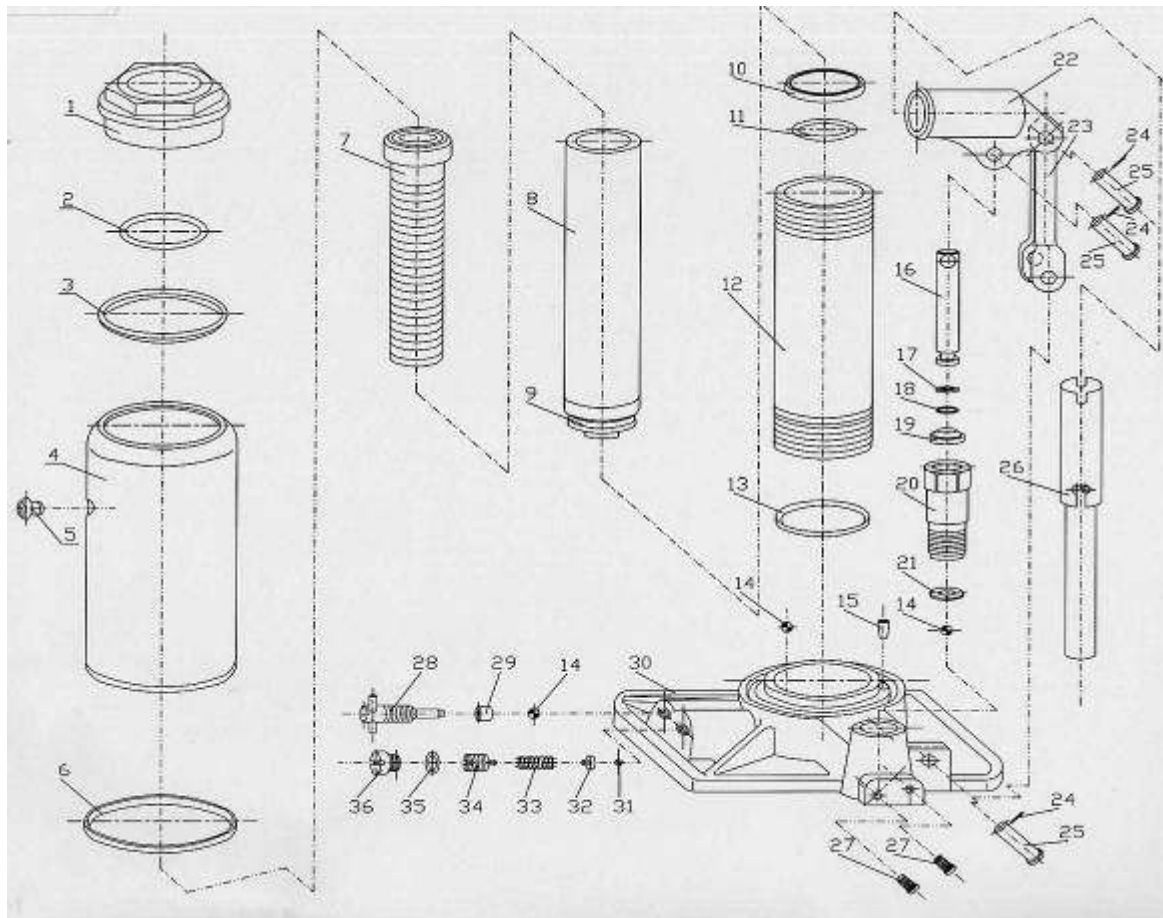

Y410800

Pos.	Art. Number	Description	Pos.	Art. Number	Description
1	Y410800-01	Top Nut	19	Y410800-19	Dust Wiper
2	Y410800-02	O-Ring	20	Y410800-20	Pump Cylinder
3	Y410800-03	Nylon Gasket	21	Y410800-21	Copper Gasket
4	Y410800-04	Oil Tank	22	Y410800-22	Handle Socket
5	Y410800-05	Oil Plug	23	Y410800-23	Linkage
6	Y410800-06	Square Seal	24	Y410800-24	Cotter Pin
7	Y410800-07	Extension Screw	25	Y410800-25	Axle
8	Y410800-08	Ram	26	Y410800-26	Handle Assembly
9	Y410800-09	Piston	27	Y410800-27	Oil Stopper
10	Y410800-10	U-cup Ring	28	Y410800-28	Release Valve
11	Y410800-11	O-Ring	29	Y410800-29	Square Seal
12	Y410800-12	Cylinder	30	Y410800-30	Base
13	Y410800-13	Square Seal	31	Y410800-31	Steel Ball
14	Y410800-14	Steel Ball	32	Y410800-32	Stud
15	Y410800-15	Dust Wiper	33	Y410800-33	Compression Spring
16	Y410800-16	Pump Plunger	34	Y410800-34	Pressure Screw
17	Y410800-17	Snap Ring	35	Y410800-35	O-Ring
18	Y410800-18	O Ring	36	Y410800-36	Safety Screw
			*	Y410800-RK	Repair Kit